Binatone

Since 1958

THE BRICK

4Home Edition

USER GUIDE

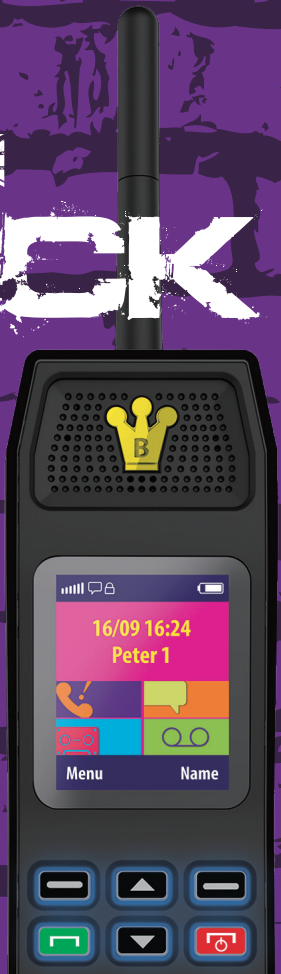

UK version

1 WELCOME

Thank you for purchasing our product!

You can use the Brick Phone to:

- *Make and receive calls*
- *Receive telephone messages and record memos using the digital answer machine*
- *250 Name and number phonebook*
- *Copy phonebook entries between handsets*
- *Screensaver clock display*
- *Answering machine with up to 30 minutes digital recording time*
- *Speakerphone for hands-free conversations*
- *Caller ID shows you who's calling and see details of the last 50 callers in a Calls Lists*[1]
- *Register up to 11 handsets to a single base and register each handset with up to 4 different bases*
- *Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller*
- *Intelligent charging*

[1]You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

2 IMPORTANT

Your Brick Phone is not designed for making emergency calls in the event of power failure. Alternative arrangements should be made for access to Emergency services during such events. (You are advised to keep a basic phone that is functional without connection to the power supply.)

Only use the power adapter supplied.

3 WHAT'S IN THE BOX?

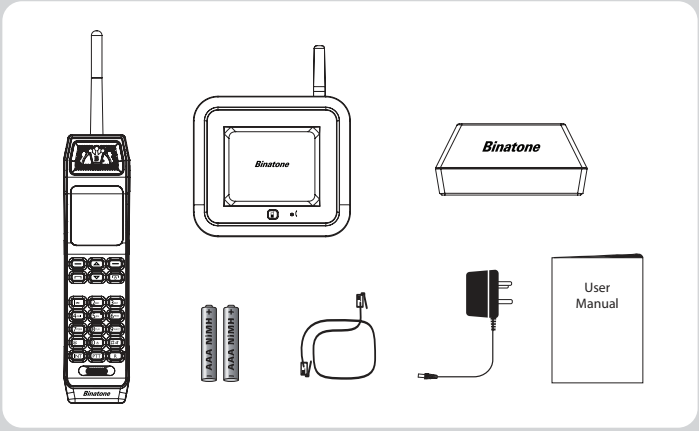

The product pack includes:

- 1 x Handset with digital answer machine
- 1 x Brick Location free base
- 1 x Brick charger
- 2 x AAA NiMH rechargeable batteries
- 1 x Telephone line cord
- 1 x Mains power adapter
- 1 x User Guide

NOTE

Keep all components and the packaging in a secure place in case you need to transport the unit later. Retain original dated sales receipt for warranty service.

4 OVERVIEW OF THE PHONE

4.1 Handset

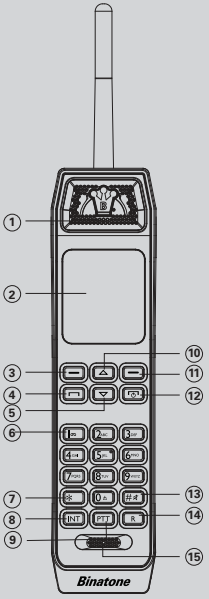

1 Earpiece

2 Display

- See page 6 for display icons.

3 Menu / OK / Mute

- Enter the main menu.
- Select the option displayed on screen.
- Confirm menu option – **OK** is displayed on screen.
- Mute / unmute the microphone during a call.

4	**Talk / Hands-free**	• Press once to access the Dialler. • Press once to answer a call. • Activate and deactivate hands-free during a call.
5	**Phonebook / Scroll down / Volume down**	• Open the phonebook. • Scroll down through lists and menus. • Decrease the earpiece volume.
6	**Voicemail**	• Press and hold to dial BT 1571.
7	**Pulse to tone dialling / * / Keylock**	• During a call, press and hold to switch from pulse dialling to tone dialling. • Dial a *. • In standby mode press and hold to lock/unlock the keypad.
8	**Intercom**	• Press to make an internal call.
9	**PTT**	• Press and hold to start push to talk conversation.
10	**Redial list / Scroll up / Volume up / Pause**	• In standby mode, press to open the redial list. • Scroll up through lists and settings. • Press and hold to enter a pause (P) during pre-dialling.
11	**Calls Lists / Scroll right / Clear / Back**	• Open the Calls Lists. Scroll to the right. • Delete characters on screen when entering names and numbers. • Go back to previous screen.
12	**End call / Exit / Switch handset on / off**	• Press once to End a call • Press and hold to switch the handset on / off

13	**# / Change case / Ringer off**	• Dial a #. • Press to change the case when entering letters/editing. • Press and hold to switch handset ringer on or off.
14	**Recall**	• Use recall (R) functions.
15	**Microphone**	

4.2 DECT base station

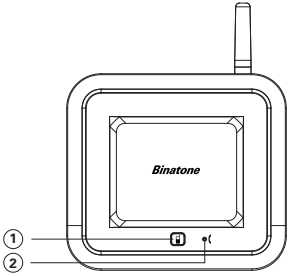

1 Power / Talk LED

2 Page Button

4.3 Display

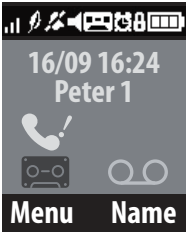

	DECT signal strength
	Displays when ECO is on
	Displays when ECO PLUS is on
	Handset ringer volume is Off
	Displays when in hands-free mode
	Answering machine on
	The alarm clock has been set
	Keylock is activated
	Displays when you have missed calls
	Displays when you have new answering machine messages
	Displays when you have new voicemails
	Battery is fully charged
	Battery is partially charged
	Battery is running low Flashes when battery is almost fully discharged

4.4 Basic operations of the Brick Phone

The basic steps of navigating through the menu and on-screen options.

1 In standby mode, press the left soft key **Menu**. The main menu is opened.
2 Use the ▲ or ▼ keys to scroll through the menu.
3 Soft key options **Select** and **Back** are displayed.
4 Press the left softkey **Select** to open a submenu or validate an option.
5 Press the right softkey **Back** to go back to the previous menu level, correct a character or cancel an action.
6 Press [⏻] to return to standby mode.

NOTE

If you do not press any button on the handset for 30 seconds the display will automatically return to standby.

Menu map

Answer Machine

- Play
- Play All
- Answer On/Off
- Record Memo
- Outgoing Msg.
- Del. Messages
- Answer Settings
  - Answer Mode
  - Answer Delay
  - Message Alert
  - Remote Access

Names

From menu in standby:
- Search
- Add Entry
- Copy Phonebk
- Memory Status
- Del. Phonebook

While viewing an entry, select **Options***:*
- Show Details
- Edit Entry
- Copy Entry
- Ringtone
- Delete Entry
- Fast Call

During a call, press **Names** *to select an entry, then select* **Options***:*
- Add Entry
- Show Details
- Edit Entry
- Delete Entry

Calls Lists

- Missed Calls
- Received Calls
- Dialled Calls
- Delete Calls

Agenda

If there is an event, press **Options** *and the following will be displayed:*
- Add Event
- Show Details
- Edit Event
- Delete Event
- Del. All Events

If the list is empty:
- Add Even

Clock & Alarm

- Date & Time
- Alarm
- Time Format

Settings

- Set Handset
  - Ringtone
  - Ringer Volume
  - Receiver Vol.
  - Handset Name
  - Language
  - Screensaver
  - Light Timeoout
  - Disp. Contrast
  - Auto Talk
  - Key Beep
  - PBX Access Code
- Set Base
  - Ringtone
  - Ringer Volume
  - Dialling Mode
  - Ring Priority
  - Recall Mode
  - System PIN
  - Master Reset
  - ECO Mode
    - ECO
    - ECO PLUS

Registration

- Register HS
- Select Base
- De-register

1 WELCOME 2

2 IMPORTANT 2

3 WHAT'S IN THE BOX? 3

4 OVERVIEW OF THE PHONE 4

4.1 Handset 4
4.2 DECT base station 6
4.3 Display 6
4.4 Basic operations of the Brick Phone 7

5 GETTING STARTED 14

5.1 Care and maintenance 14
5.2 Handset range 14
5.3 Signal strength 14
5.4 Battery low warning 15
5.4.1 Battery performance 15
5.5 Connecting the power cable and telephone line cord 15
5.6 Connecting the handset and charger 16
5.7 Removing battery cover and installing battery 16
5.8 Switch the handset on / off 17
5.9 Clock & Alarm 17
5.9.1 To set date and time manually 17
5.9.2 To set alarm 17
5.9.3 To set time format 18
5.10 To lock the keypad 18

6 USING THE PHONE FUNCTIONS 18

6.1 To make a call 18
6.2 To make a call by pre-dialling 18
6.3 To make a call using fast call keys 19
6.4 To make a hands-free call 19
6.5 Call from the phonebook 19
6.6 Call from the Calls Lists 19
6.7 To answer a call 20
6.8 To answer a call in hands-free 20
6.9 To adjust the volume 20
6.10 To mute the microphone 20

6.11 To end a call 21
6.12 Intercom 21
6.12.1 Make an internal call 21
6.12.2 Receive an internal call 21
6.12.3 Transfer a call 21
6.12.4 3-way conference call 22
6.13 Push to Talk (PTT) 22

7 PHONEBOOK 23

7.1 To view and dial phonebook entries 23
7.2 To store an entry 23
7.3 Entering names 24
7.4 Character map 24
7.5 To enter a pause 25
7.6 To search an entry 25
7.7 To view details of an entry 25
7.8 To edit an entry 25
7.9 To copy an entry to another handset 26
7.10 To assign a ringtone 26
7.11 To delete an entry 27
7.12 To store a fast call number 27
7.13 To clear a fast call number 27
7.14 To access the phonebook during a call 28
7.15 To copy the phonebook to another handset 28
7.16 To check memory status 28
7.17 To delete all entries 28

8 CALLS LISTS 29

8.1 New calls alert 29
8.2 To view details of the call 30
8.3 To save a number from the Calls Lists to the phonebook 30
8.4 To delete a Calls Lists entry 31
8.5 To delete entire Calls Lists 31
8.6 To redial the last number 31
8.7 To view and dial a number in the redial list 31
8.8 To copy a redial number to the phonebook 32
8.9 To delete a redial list entry 32

9 AGENDA 32

9.1 To add a new event 32
9.2 To switch off reminder ring 33
9.3 To show event details 33
9.4 To edit an event 34
9.5 To delete an event 34
9.6 To delete all events 34

10 HANDSET SETTINGS 35

10.1 To set the handset ringtone 35
10.2 To set the handset ringer volume 35
10.3 To set the receiver volume 36
10.4 To change the handset name 36
10.5 To change the display language 36
10.6 To set the screensaver 36
10.7 To set light timeout 37
10.8 To change display contrast 37
10.9 To switch auto talk on / off 37
10.10 To switch key beep on / off 38
10.11 To set PBX Access Code 38

11 BASE SETTINGS 38

11.1 To set the base ringtone 38
11.2 To set the base ringer volume 39
11.3 To change the dialling mode 39
11.4 To set ring priority 39
11.5 To change the recall mode 40
11.6 To change the System PIN 40
11.7 To reset the phone 41
11.8 To switch ECO on / off 41
11.9 To switch ECO PLUS on / off 41

12 REGISTRATION 42

12.1 To register a handset 42
12.2 To select a base 43
12.3 To de-register a handset 44

13 ANSWERING MACHINE 44
13.1 Switch between answering machine on / off 44
13.2 To change answer delay 45
13.3 To switch message alert tone on / off 45
13.4 New messages alert 45
13.5 Outgoing messages 46
13.6 To record a personalised OGM 46
13.7 To play or delete your personalised OGM 46
13.8 To set the answer mode OGM 47
13.9 To record a memo 47
13.10 Call screening 48
13.11 Message playback 48
13.12 Delete all old messages 49
13.13 Remote access 49
13.14 To switch remote access on / off 50
13.15 To change the remote access PIN 51
14 HELP 51
14.1 Warranty and Service 53
14.1.1 Servicing Under Warranty 54
14.1.2 Servicing After Warranty Has Expired 54
15 TECHNICAL DETAIL 55

5 GETTING STARTED

WARNING

- Do not place your Brick Phone in the bathroom or other humid areas.
- Do not place your Brick Phone near sources of heat and extreme temperatures, such as fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Do not disassemble your Brick Phone; there are no user-serviceable parts inside.
- If the LCD screen breaks, do not touch the glass or liquid. Contact customer support for assistance.
- Use only the power adapter supplied with your Brick Phone.

5.1 Care and maintenance

- Clean gently with a soft, clean, dry cloth.
- To remove fingerprints on the LCD screen, wipe gently with a soft, lint-free cloth. Do not use cleaning solutions unless they are designed specifically for LCD screens.

IMPORTANT

Always switch off and disconnect the power adapter before cleaning the Brick Phone.

5.2 Handset range

The Brick Phone has a range of 1000 meters outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 meters. Thick stone walls can severely affect the range.

5.3 Signal strength

The icon on your handset indicates when you are in range.

When out of range of the base, the signal strength will drop out. If you are on a call, the line will hang up. Move back within range. The handset will automatically re-connect to the base.

5.4 Battery low warning

If you hear a warning beep every 30 seconds during a call, you will need to recharge the handset before you can use it again.

When charging, icon will scroll on the display.

5.4.1 Battery performance

Under ideal conditions, fully charged batteries should give about 10 hours talk time or 200 hours standby time on a single charge.

Note that new batteries will not reach full capacity until they have been in normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Drain the batteries completely at least once a week before charging will help to prolong battery life.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time will be about 6 hours a day. Batteries and handset may become warm during charging. This is normal.

5.5 Connecting the power cable and telephone line cord

1 Plug one end of the power cable and telephone line cord to the power jack and phone jack respectively on the back of the DECT base station.

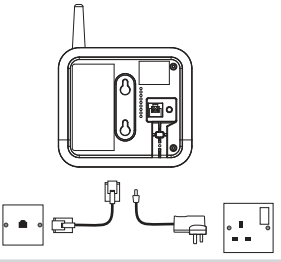

2 Plug the other end into a power and telephone wall socket.

5.6 Connecting the handset and charger

1 Plug one end of the power cable into the power jack on the rear of the charger.

2 Plug the other end into a power wall socket.

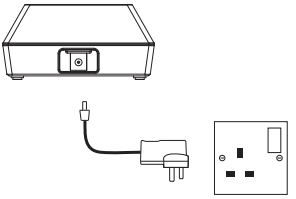

5.7 Removing battery cover and installing battery

1 Remove the battery cover from the back of the handset and insert the rechargeable battery supplied.

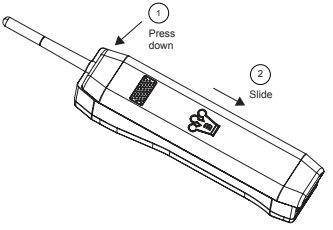

2 Slide the battery cover back into place.

3 If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

NOTE

Battery performance depends on your usage patterns.

IMPORTANT

Use only the rechargeable battery that is provided with your Brick Phone.

5.8 Switch the handset on / off

1 Press and hold [⏻] to turn the handset on / off.

5.9 Clock & Alarm

If you have subscribed to your network's Caller Display service, the date and time is set automatically for all handsets when you receive your first call.

If you are not subscribed to Caller Display service, you can set the date and time manually.

5.9.1 To set date and time manually

1 Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.
2 **Date & Time** is highlighted. Press **Select**.
3 Enter the date using the format DD/MM/YY e.g. **04/08/13** for 4 August 2013.
4 Enter the time (HH:MM) and press **Save**.
If the current time format setting is 12 hour, select **am** or **pm**.
5 Press [⏻] to return to standby mode.

NOTE

The date and time is retained during a power failure or when the batteries are discharged.

5.9.2 To set alarm

When the alarm is set, the display shows icon.

Each handset can have a different alarm setting.

1 Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.
2 Scroll ▼ to **Alarm** and press **Select**.
3 Scroll ▲ or ▼ to **Off** or **On** and press **Select**.
If **Alarm** is set to On:
Scroll ▲ or ▼to **Once**, **Mon - Fri** or **On Daily** then press **Select**.
Enter the time (HH:MM) and press **Save**.
If the current time format setting is 12 hour, select **am** or **pm**.

4 Press [⏻] to return to standby mode.

NOTES

If the alarm is set to **Once**, *will disappear from the screen after the alarm has sounded once.*

If the alarm is set to **On Daily** *or* **Mon - Fri**, *will remain on the screen after the alarm has sounded.*

When the alarm goes off, press any key to stop the ring.

5.9.3 To set time format

1 Press **Menu**, scroll ▼ to **Clock & Alarm** and press **Select**.

2 Scroll ▼ to **Time Format** and press **Select**.

3 Scroll ▲ or ▼ to **12 Hour** or **24 Hour** and press **Select**.

4 Press [⏻] to return to standby mode.

5.10 To lock the keypad

You can lock the keypad to prevent accidental dialling while carrying it around.

Press and hold *****. The icon is displayed.

To unlock the keypad, press **Unlock**. The display shows **Press * to Unlock Keys**.

Press *****.

NOTE

While the keypad is locked, you can answer incoming calls as normal.

Your phone is now ready for use.

6 USING THE PHONE FUNCTIONS

6.1 To make a call

1 Press [⌐].

2 Dial the telephone number.

6.2 To make a call by pre-dialling

1 Enter the phone number (maximum 32 digits). If you make a mistake, press **Clear**.

2 Press [⌐] to dial the phone number entered.

NOTE

If the dialled number matches an entry in the phonebook, the name is displayed.

6.3 To make a call using fast call keys

1 Press and hold the relevant keypad number to dial the pre-stored number directly.

NOTE

To store a fast call number, see page 27.

6.4 To make a hands-free call

1 Press [⌐] twice.

2 Dial the telephone number.

NOTE

During a hands-free call, press ▲ or ▼ to adjust the volume.

6.5 Call from the phonebook

1 Press ▼. The first entry in the phonebook is highlighted.

2 Scroll ▲ or ▼ to the entry you want.
Or
To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press **6** twice. The display shows the first entry beginning with N. If required, scroll ▲ or ▼ to the exact entry.

3 Press [⌐] to dial the number.

6.6 Call from the Calls Lists

NOTE

You need to subscribe to your network's Call Display service to be able to see the caller's number in the Calls Lists.

1 Press **Menu**, scroll ▼ to **Calls Lists** and press **Select**.

2 Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.

3 Press **Select** to confirm.

4 Scroll ▲ or ▼ to the entry you want.

5 Press [⌐] to dial the number.

6.7 To answer a call

When you receive an external call, the phone rings and **External Call** shows on the display.

1 If the handset is off the base then press ⌐ to answer the call, or if the handset is on the base simply lift the handset to answer the call.

NOTE

If you prefer to press ⌐ when you lift up the handset to answer a call, you will need to switch Auto Talk off, see page 37.

6.8 To answer a call in hands-free

If the handset is on the base and auto answer is switched on, lift the handset and press ⌐.

If the handset is off the base or auto answer is switched off, press ⌐ twice to answer the call.

IMPORTANT

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing. Hands-free activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

NOTE

To switch back to earpiece mode, press ⌐ again during the call.

6.9 To adjust the volume

1 During a call, press ▲ or ▼ to adjust the earpiece or loudspeaker volume.
The level is shown in the handset display.

6.10 To mute the microphone

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1 During a call, press **Secrec.**. The display shows **Secrecy On** and your caller cannot hear you.

2 Press **Off** to return to your caller.

6.11 To end a call

1 Press [⏻] or replace the handset on the cradle.

NOTE

After you hang up, the duration of your call is displayed for 5 seconds.

6.12 Intercom

6.12.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

Internal Call and **Handset X** displays to indicate an internal call.

1 Press [INT] followed by the number (1-11) of the handset you want to call.
Press and hold **0** to dial handset 10. Press and hold **1** to dial handset 11.

2 Press **OK**.

6.12.2 Receive an internal call

When you receive an internal call, **Internal Call** and **Handset X** is displayed.

1 If the handset is off the base then press [⌐] to answer the call, or if the handset is on the base simply lift the handset to answer the call.

6.12.3 Transfer a call

You can transfer an external call to another handset registered to the base.

During an external call:

1 Press [INT] followed by the handset number (1-11) that you want to transfer the call to.
Press and hold **0** to dial handset 10. Press and hold **1** to dial handset 11.

2 Press **OK**.

3 When the other handset answers, press [⏻] to complete the transfer.

NOTES

If there is no answer from the other handset and you wish to return to your external caller, press INT.

Your external call resumes automatically after 100 seconds if there is no answer.

6.12.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

1 Press INT followed by the handset number (1-11) that you want to establish a conference call.
Press and hold **0** to dial handset 10. Press and hold **1** to dial handset 11.

2 Press **OK**.

3 When the other handset answers, press **Join** to connect all three callers and begin the conference call.

4 If there is no answer from the other handset, press INT to return to your external caller.

5 Press to end the call.

6.13 Push to Talk (PTT)

The PTT feature allows handsets 1-5 to work as a walky-talky. Once the PTT key is pressed and held on a handset the other 4 handset will be able to hear the conversation from it.

1 To start a PTT conversation, press and hold PTT for 1.5 seconds until you hear a confirmation beep.

2 Keep holding PTT and talk into the handset.

3 If you started the PTT conversation on handset 1, all other handsets (2-5) will be able to hear the conversation.

4 Release PTT to stop the conversation.

NOTES

Any one of the 5 handsets can start a PTT conversation.

If during a PTT conversation and incoming call is received then the conversation will automatically stop and the phone will ring.

7 PHONEBOOK

The handset phonebook can store up to 250 names and numbers.

NOTE

Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.

7.1 To view and dial phonebook entries

In standby mode, press ▼. The first entry is highlighted on the display.

1 Scroll ▲ or ▼ to the entry you want.
Or
To search alphabetically, press the key with the first letter of the name, e.g. if the name begins with N, press **6** twice. The display shows the first entry beginning with N. If required, scroll ▲ or ▼ to the exact entry.

2 Press [ ] to dial the entry displayed.

7.2 To store an entry

1 Press **Names** to enter the phonebook menu.

2 Scroll ▼ to **Add Entry** and press **Select**.

3 Enter a name and press **OK**.

4 Enter a number and press **Save**.

5 Scroll ▲ or ▼ to the ringtone you want and press **Select**. The entry is stored.

6 **To Handset** is displayed and the handset will automatically give you the option to transfer the number to another handset.

7 Press **Yes** and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. Once the entry is copied the transferring handset will display **successful handset X**.

8 Press [ ] to return to standby mode.

NOTE

Cancel storing an entry by pressing [ ] at any time during the process.

7.3 Entering names

Use the alphanumeric keypad to enter names in the phonebook.

For instance to enter the name Paul

P Press **7** once

A Press **2** once

U Press **8** twice

L Press **5** three times

To enter a space, press **0**.

Press ▲ or ▼ to move between characters/digits.

Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.

7.4 Character map

Key	Case	Assigned characters and symbols
1	L/U*	. , - ? ! ¡ ¿ ‘ @ : ; / 1
2	L	a b c 2 à æ å à ç
	U	A B C 2 Ä Æ Å Ç
3	L	d e f 3 è é
	U	D E F 3 É
4	L	g h i 4 ì
	U	G H I 4
5	L	j k l 5
	U	J K L 5
6	L	m n o 6 ö ø ò ñ
	U	M N O 6 Ö Ø Ñ
7	L	p q r s 7 ß
	U	P Q R S 7
8	L	t u v 8 ù ü
	U	T U V 8 Ü
9	L	w x y z 9
	U	W X Y Z 9
0	L/U	Space 0
#	L/U	Short press to switch between Abc, abc, ABC and 123 mode

*L = Lower
U = Upper

7.5 To enter a pause

If the phone is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard PBX Access Code (e.g. 9)

When storing a number, press and hold ▲ until the display shows P. You can then continue storing the phone number.

7.6 To search an entry

1 Press **Names** to enter the phonebook menu.

2 **Search** is highlighted. Press **Select**. The first entry is highlighted on the display.

3 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry.

4 Press [⌐] to dial the entry or [⏻] to return to standby mode.

7.7 To view details of an entry

1 In standby mode, press ▼. The first entry is highlighted on the display.

2 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press **Options**.

3 **Show Details** is highlighted. Press **Select**. The name, number and ringtone of the entry are displayed.

4 Press [⏻] to return to standby mode.

7.8 To edit an entry

1 In standby mode, press ▼. The first entry is highlighted on the display.

2 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press **Options**.

3 Scroll ▼ to **Edit Entry** and press **Select**.

4 Edit the name and press **OK** to confirm. Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.

5 Edit the number and press **Save**. Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.

6 Scroll ▲ or ▼ to the ringtone you want and press **Select**. The entry is stored.

7 **To Handset** is displayed and the handset will automatically give you the option to transfer the number to another handset.

8 Press **Yes** and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. When the entry is being copied the transferring handset will display **copying from handset x**.

9 Press [⏻] to return to standby mode.

7.9 To copy an entry to another handset

1 In standby mode, press ▼. The first entry is highlighted on the display.

2 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press **Options**.

3 Scroll ▼ to **Copy Entry** and press **Select**.

4 The display shows **To Handset**, press **Select**.

5 Scroll ▲ or ▼ to the number of the handset you want the entry to be copied to. Press **Select**.

6 Copy is completed when the message "**<Name> copied**" appears on the display.

7 Press [⏻] to return to standby mode.

NOTE

If an entry with the same number is already stored in the receiving handset, it will not be copied.

7.10 To assign a ringtone

1 In standby mode, press ▼. The first entry is highlighted on the display.

2 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press **Options**.

3 Scroll ▼ to **Ringtone** and press **Select**.

4 Scroll ▲ or ▼ to the ringtone you want and press **Select**. The ringtone is saved.

5 Press [⏻] to return to standby mode.

7.11 To delete an entry

1 In standby mode, press ▼. The first entry is highlighted on the display.
2 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry. Press **Options**.
3 Scroll ▼ to **Delete Entry** and press **Select**.
4 Display shows **Delete <Name>?**. Press **Yes** to confirm.
5 Press [⏻] to return to standby mode.

7.12 To store a fast call number

1 Press **Names** to enter the phonebook menu.
2 **Search** is highlighted. Press **Select**. The first entry is highlighted on the display.
3 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼to the exact entry, then press **Options**.
4 Scroll ▲ or ▼ to **Fast Call**, press **Select** to confirm.
5 Scroll ▲ or ▼ to **Key X** where the entry will be stored, press **Select**.
6 **Assign** is highlighted press **Select** to confirm.
7 Press [⏻] to return to standby.

NOTES

The BT 1571 voicemail service has been pre-stored under the **1** *key on the keypad of your Brick phone.*

To dial fast call numbers, see page 19.

7.13 To clear a fast call number

1 Press **Names** to enter the phonebook menu.
2 **Search** is highlighted. Press **Select**. The first entry is highlighted on the display.
3 Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry, then press **Options**.
4 Scroll ▲ or ▼ to **Fast Call**, press **Select**.
5 Scroll ▲ or ▼ to **Key X** where the entry is stored, press **Select**.
6 Scroll ▲ or ▼ to **Clear Entry**, press **Select** to confirm.

7 Press [⏻] to return to standby.

7.14 To access the phonebook during a call

1 During a call, press **Names**.

2 Press **Options** to select **Add Entry**, **Show Details**, **Edit Entry** or **Delete Entry**.

7.15 To copy the phonebook to another handset

1 Press **Names** to enter the phonebook menu.

2 Scroll ▼ to **Copy Phonebk** and press **Select**.

3 The display shows **To Handset**, press **Select**.

4 Scroll ▲ or ▼ to the number of the handset you want the phonebook to be copied to. Press **Select**.

5 Copy is completed when the message "**X Entries Copied**" appears on the display.

6 Press [⏻] to return to standby mode.

NOTE

If an entry with the same number is already stored in the receiving handset, it will not be copied.

7.16 To check memory status

You can check how much phonebook memory you have on your phone.

1 Press **Names** to enter the phonebook menu.

2 Scroll ▼ to **Memory Status** and press **Select**. The display shows the number of used and free phonebook entries.

3 Press [⏻] to return to standby mode.

7.17 To delete all entries

1 Press **Names** to enter the phonebook menu.

2 Scroll ▼ to **Del. Phonebook** and press **Select**.

3 Display shows **Delete All Entries ?**. Press **Yes**.

4 Press [⏻] to return to standby mode.

8 CALLS LISTS

If you have subscribed to Call Display service, and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTES

If the caller's number is stored in your phonebook along with a name, the name will also be displayed.

If the number is unavailable, **Unavailable** *will be displayed.*

If the caller has withheld their number, **Withheld** *will be displayed.*

If the call is from an international number, **International** *will be displayed.*

If the call is from the operator, **Operator** *will be displayed.*

If the call is from a payphone, **Payphone** *will be displayed.*

If the call is from a ringback request, **Ringback** *will be displayed.*

Information about incoming calls is dependent on the country and network operator. Some operators may charge a subscription for their Call Display service.

The Calls Lists contains details of missed and received call. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

When the list is full, and a new call is received, the oldest entry will be deleted automatically.

The received and missed Calls Lists holds details of up to 50 calls.

If you receive more than one call from the same number, only the most recent call is kept in the Calls Lists.

8.1 New calls alert

When you have new missed calls (incoming calls that you haven't answered), the display shows **You have X new calls**.

1 Press **View** to see details of the call.

2 If you press **Back**, the screen returns to standby mode and the icon is displayed.

8.2 To view details of the call

1 Press **Menu**, scroll ▼ to **Calls Lists** and press **Select**.
2 Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.
3 Press **Select** to confirm. The most recent number or name if stored in the phonebook is displayed.
4 Scroll ▲ or ▼ to the entry you want and press **Options**.
5 Display shows **Show Details**. Press **Select**.
The number (or name if stored in the phonebook), date and time of the call are displayed.
6 Press **Back** to return to the previous menu level or to return to standby mode.

8.3 To save a number from the Calls Lists to the phonebook

1 Press **Menu**, scroll ▼ to **Calls Lists** and press **Select**.
2 Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.
3 Press **Select** to confirm. The most recent number or name if stored in the phonebook is displayed.
4 Scroll ▲ or ▼ to the entry you want and press **Options**.
5 Scroll ▼ to **Save Number** and press **Select**.
6 Enter a name and press **OK**.
7 Display shows the number of the call. Edit the number if necessary and press **Save**.
Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.
8 Scroll ▲ or ▼ to the ringtone you want and press **Select**. The entry is stored.
9 To **Handset** is displayed and the handset will automatically give you the option to transfer the number to another handset.

10 Press **Yes** and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. Once the entry is copied the transferring handset will display **successful handset X**.

11 Press [⏻] to return to standby mode.

8.4 To delete a Calls Lists entry

1 Press **Menu**, scroll ▼ to **Calls Lists** and press **Select**.

2 Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls**, **Delete Calls**) you want.

3 Press **Select** to confirm. The most recent number or name if stored in the phonebook is displayed.

4 Scroll ▲ or ▼ to the entry you want and press **Options**.

5 Scroll ▼ to **Delete Call** and press **Select**. The call is deleted.

6 Press [⏻] to return to standby mode.

8.5 To delete entire Calls Lists

1 Press **Menu**, scroll ▼ to **Calls Lists** and press **Select**.

2 Scroll ▼ to **Delete Calls** and press **Select**.

3 Scroll ▲ or ▼ to highlight the calls list (**Missed Calls**, **Received Calls**, **Dialled Calls** or **All Calls**) you want.

4 Display shows **Delete All Calls ?**. Press **Yes** to confirm.

5 Press [⏻] to return to standby mode.

8.6 To redial the last number

The phone lets you redial any of the last 20 numbers called. Numbers can be up to 32 digits long.

1 Press ▲. The last number dialled is highlighted.
If the number is stored in the Phonebook, the name is displayed as well.

2 Press [⌐] to dial.

8.7 To view and dial a number in the redial list

1 Press ▲. The last number dialled is highlighted.

2 Scroll ▲ or ▼ to the entry you want.

3 Press [⌐] to dial the number or press **Back** to return to standby.

8.8 To copy a redial number to the phonebook

1 Press ▲. The last number dialled is highlighted.
2 Scroll ▲ or ▼ to the entry you want and press **Options**.
3 Scroll ▼ to **Save Number** and press **Select**.
4 Enter a name and press **OK**.
5 Display shows the number of the call. Edit the number if necessary and press **Save**.
6 Scroll ▲ or ▼ to the ringtone you want and press **Select**. The entry is stored.
7 To **Handset** is displayed and the handset will automatically give you the option to transfer the number to another handset.
8 Press **Yes** and if there are two or more handsets registered to the base the number will automatically transfer to the other handsets one by one. When the entry is being copied the transferring handset will display **copying from handset x**.
9 Press [⏻] to return to standby mode.

8.9 To delete a redial list entry

1 Press ▲. The last number dialled is highlighted.
2 Scroll ▲ or ▼ to the entry you want and press **Options**.
3 Scroll ▼ to **Delete Call** and press **Select**. The call is deleted.
4 Press [⏻] to return to standby mode.

9 AGENDA

9.1 To add a new event

Use the phone to remind you of details of up to five events such as birthdays, anniversaries or appointments.

Up to 24 characters can be entered as the subject.

1 Press **Menu**, scroll ▼ to **Agenda** and press **Select**.
2 If no previous event is stored, **Add Event** is highlighted. Press **Select**.
Or
If events are already stored, they are listed. Press **Options**. **Add Event** is highlighted. Press **Select**.

3 Enter the subject and press **Save**.
4 Enter the date (DD/MM) and time (HH:MM) and press **Save**.
5 If the current time format setting is 12 hour, select **am** or **pm**. Scroll ▲ or ▼ to **Silent** or **Alarm** then press **Select**.
If you press **Alarm**:
- Scroll ▲ or ▼ to **Once** or **Annually** then press **Select**.
- If **Once** is selected, scroll ▲ or ▼ to select when you want to receive the reminder **At event time** or **30 min before**. Press **Select** to save.
- If **Annually** is selected, then the alarm will sound at the event's time.

6 Press [⏻] to return to standby mode.

NOTES

If you select a silent reminder, the event subject is displayed on screen but no alarm will sound.

When the event memory is full, the display shows **Memory Full***. You must delete an event before you can add a new one.*

9.2 To switch off reminder ring

When the event is due, the event subject is displayed. If the reminder is not set to **Silent**, the alarm will ring and the icon is displayed.

1 Press **View** to stop the alarm and see the details of the event.
Or
Press **Back** to stop the alarm and return to standby mode.

NOTE

If no button is pressed, the alarm stops after one minute.

9.3 To show event details

1 Press **Menu**, scroll ▼ to **Agenda** and press **Select**.
2 Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press **Options**.
3 Scroll ▼ to **Show Details** and press **Select**. The description, date and time of the agenda are displayed.

4 Press **Back** to return to the previous menu level or [⏻] to return to standby mode.

9.4 To edit an event

1 Press **Menu**, scroll ▼ to **Agenda** and press **Select**.
2 Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press **Options**.
3 Scroll ▼ to **Edit Event** and press **Select**.
4 Edit the subject and press **Save**.
Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.
5 Edit the date (DD/MM) and time (HH:MM) and press **Save**.
If the current time format setting is 12 hour, select **am** or **pm**.
6 Scroll ▲ or ▼ to **Silent** or **Alarm** then press **Select**.
If you press **Alarm**:
Scroll ▲ or ▼ to **Once** or **Annually** then press **Select**.
- If **Once** is selected, scroll ▲ or ▼ to select when you want to receive the reminder **At event time** or **30 min before**. Press **Select** to save.
- If **Annually** is selected, then the alarm will sound at the event's time.

7 Press [⏻] to return to standby mode.

9.5 To delete an event

1 Press **Menu**, scroll ▼ to **Agenda** and press **Select**.
2 Stored events are displayed. The first event is highlighted on the display. If required, scroll ▼ to the event you want and press **Options**.
3 Scroll ▼ to **Delete Event** and press **Select**.
4 Display shows **Delete Event ?**. Press **Yes** to confirm or **No** to cancel.
5 Press [⏻] to return to standby mode.

9.6 To delete all events

1 Press **Menu**, scroll ▼ to **Agenda** and press **Select**.

2 Stored events are displayed. The first event is highlighted on the display. Press **Options**.
3 Scroll ▼ to **Del. All Events** and press **Select**.
4 Display shows **Delete All Events ?**. Press **Yes** to confirm or **No** to cancel.
5 Press [⏻] to return to standby mode.

10 HANDSET SETTINGS

10.1 To set the handset ringtone

You can set different ringtones for external calls and internal calls.

Select from 20 handset ringtones.

You will hear a sample ring as you scroll to each ringtone.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 **Ringtone** is highlighted. Press **Select**.
4 Scroll ▲ or ▼ to **External Call** or **Internal Call** and press **Select**.
5 Scroll ▲ or ▼ to the ringtone that you want and press **Select**.
6 Press [⏻] to return to standby mode.

10.2 To set the handset ringer volume

The handset has 5 ringer volume settings plus Off.

If the volume is set to Off, icon is displayed.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Ringer Volume** and press **Select**.
4 Scroll ▲ or ▼ to adjust the ringer volume level and press **Select**.
5 Press [⏻] to return to standby mode.

NOTES

When the phone is ringing, you may press **Silence** *to silent the ringer for that call.*

When the handset is in standby mode press and hold # to turn the ringer off, press and hold # again to turn it on.

10.3 To set the receiver volume

This sets the standard volume level for the handset earpiece or hands-free. There are 8 levels to choose from.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Receiver Vol.** and press **Select**.
4 Scroll ▲ or ▼ to adjust the receiver volume level and press **Select**.
5 Press [⏻] to return to standby mode.

10.4 To change the handset name

If you are using more than one handset with the base, you can give each handset a personalised name to easily distinguish between the handsets.

A name can be up to 10 characters long.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Handset Name** and press **Select**.
4 Enter the name and press **Save**.
Press **Clear** to delete a character, or press and hold **Clear** to delete all characters.
5 Press [⏻] to return to standby mode.

10.5 To change the display language

The available languages include:

English, Français, Deutsch, Italiano, Español, Nederlands, Ελληνικά, Português and Türkçe.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Language** and press **Select**.
4 Scroll ▲ or ▼ to the language you want and press **Select**.
5 Press [⏻] to return to standby mode.

10.6 To set the screensaver

When the screensaver is set to Clock, an analogue clock is displayed.

The screensaver comes on when the screen backlight switches off in standby mode. To change the backlight timeout setting, see “To set light timeout” in the next section.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Screensaver** and press **Select**.
4 Scroll ▲ or ▼ to **Clock** or **Off** then press **Select**.
5 Press [⏻] to return to standby mode.

10.7 To set light timeout

Set the duration of the backlight after the handset returns to standby screen.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Light Timeout** and press **Select**.
4 Scroll ▲ or ▼ to set the timeout period you want and press **Select**.
5 Press [⏻] to return to standby mode.

10.8 To change display contrast

Select from 3 levels of contrast.

The brightness of the display changes you scroll to each contrast level.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Disp. Contrast** and press **Select**.
4 Scroll ▲ or ▼ to **Low**, **Medium** or **High** then press **Select**.
5 Press [⏻] to return to standby mode.

10.9 To switch auto talk on / off

With Auto Talk switched on, you can answer a call just by lifting the handset off the base or charger. If switched off, you will have to press [↩] to answer a call.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.

3 Scroll ▼ to **Auto Talk** and press **Select**.
4 Scroll ▲ or ▼ to **Off** or **On** then press **Select**.
5 Press [⏻] to return to standby mode.

10.10 To switch key beep on / off

When you press a button on the handset, you will hear a beep. You can switch it on or off.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **Key Beep** and press **Select**.
4 Scroll ▲ or ▼ to **Off** or **On** then press **Select**.
5 Press [⏻] to return to standby mode.

10.11 To set PBX Access Code

If the phone is connected to a switchboard, you may need to enter an PBX Access Code in the dialling sequence to be able to connect to the outside line.

The PBX Access Code will be displayed at the beginning of a number on the screen. The code can be up to 4 digits long.

The PBX Access Code will not be used when you dial the number manually (such as when you are not dialling from the phonebook). This allows you to make calls to other switchboard extensions.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 **Set Handset** is highlighted. Press **Select**.
3 Scroll ▼ to **PBX Access Code** and press **Select**.
4 Scroll ▲ or ▼ to **Off**, **On** or **Set Code** then press **Select**.
If you select **Set Code**, enter the switchboard access code e.g. 9 then press **Save**.
5 Press [⏻] to return to standby mode.

11 BASE SETTINGS

11.1 To set the base ringtone

Select from 5 base ringtones.

You will hear a sample ring as you scroll to each ringtone.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 **Ringtone** is highlighted. Press **Select**.
4 Scroll ▲ or ▼ to the ringtone that you want and press **Select**.
5 Press [⏻] to return to standby mode.

11.2 To set the base ringer volume

The base has 5 ring volume settings plus Off.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **Ringer Volume** and press **Select**.
4 Scroll ▲ or ▼ to display the volume level that you want and press **Select**.
5 Press [⏻] to return to standby mode.

11.3 To change the dialling mode

The phone is preset to Tone dialling. It is unlikely that you need to change this setting.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **Dialling Mode** and press **Select**.
4 Scroll ▲ or ▼ to **Pulse** or **Tone** then press **Select** to confirm.
5 Press [⏻] to return to standby mode.

11.4 To set ring priority

When you have more than one handset registered to your base, you can set one handset to ring before the other handsets. This allows one handset user to answer all incoming calls first, for example, the receptionist.

Choose **All Handsets** if you want all handsets to ring at the same time or **Select Handset** to nominate a handset to ring two times before the other handsets ring.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **Ring Priority** and press **Select**.

4 Scroll ▲ or ▼ to **All Handsets** or **Select Handset** then press **Select**. If you choose **Select Handset**, all available handsets are displayed.
   - Scroll ▲ or ▼ to the handset you want then press **Select**.
   - Scroll ▲ or ▼ to the number of rings that you want to set: 2, 4 or 6 and press **Select**.

5 Press [⏻] to return to standby mode.

11.5 To change the recall mode

Recall is useful to access certain network services and PABX/ switchboard services.

The default recall mode preset in the phone is suitable for your country network and therefore you should not need to change it.

NOTE

The use of the phone cannot be guaranteed on all PABX.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **Recall Mode** and press **Select**.
4 Scroll ▲ or ▼ to **Recall 1** or **Recall 2** then press **Select** to confirm.
5 Press [⏻] to return to standby mode.

11.6 To change the System PIN

The System PIN is required when changing certain settings and for registration / de-registration. The default setting is 0000. You can change this to your own preferred number (up to 4 digits).

When you enter a PIN, the digits are shown as ****.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **System PIN** and press **Select**.
4 Enter the old PIN (Default setting = 0000) and press **OK**.
5 Enter the new PIN and press **OK**.
6 Re-enter the new PIN and press **OK**.
7 Press [⏻] to return to standby mode.

NOTE

It is advisable to make a note of your new PIN code and keep it somewhere safe.

11.7 To reset the phone

You can restore the phone to its default (original) settings.

Resetting the phone will not affect the phonebook or Calls Lists, and all handsets registered to the base will be retained. Only the handset and base settings will be reset.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **Master Reset** and press **Select**.
4 Select **Yes** to confirm or **No** to cancel.
5 Enter the System PIN (Default setting = 0000) then press **OK**. The display will show Reset complete and the unit will restart automatically.

11.8 To switch ECO on / off

Your Brick offers an ECO function which reduces the transmitted power and energy consumption when switched on. This feature is set to **Off** by default.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.
3 Scroll ▼ to **ECO Mode** and press **Select**.
4 **ECO** is highlighted, press **Select**.
5 Scroll ▲ or ▼ to **Off** or **On** and press **Select** to confirm.
6 Press [⏻] to return to standby.

11.9 To switch ECO PLUS on / off

When ECO PLUS is activated and the unit has been idle for 1 minute the transmitted power between the handset and the base will stop, an incoming call or pressing any key will activate the unit and it will revert back to the normal mode.

This feature is set to Off by default.

1 Press **Menu**, scroll ▼ to **Settings** and press **Select**.
2 Scroll ▼ to **Set Base** and press **Select**.

3 Scroll ▼ to **ECO Mode** and press **Select**.
4 Press ▲ or ▼ to **ECO PLUS**, press **Select**.
5 Press ▲ or ▼ to highlight **Off** or **On** then press **Select**.
6 Press [⏻] to return to standby.

NOTES

When ECO is set to on, the *icon is replaced with* *icon. The base transmission power will be reduced.*

When ECO PLUS is set to **On** will be displayed.

12 REGISTRATION

Up to 11 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

- *The instructions described below apply specifically to the handset of this model If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the instruction manual of the additional handset.*
- *The System PIN is required to register or de-register handsets. The default PIN is 0000.*

12.1 To register a handset

On the base:

1 Press and hold **PAGE** until the base emits a double beep. The base will remain in registration mode for 90 seconds.

On the handset:

1 If the handset is new, the display shows **Please register**. Press **Reg**.
2 Display shows **Press and Hold Base Find Key**.
3 Press **OK**, display shows **Searching Base X**. If the system PIN is 0000 (default) the handset will automatically register, if the PIN has been changed enter the system PIN and press **OK**.

4 When registration is complete, the display shows **Handset Registered**.
Or
If the handset has already been registered to another base, the standby display is shown. Press **Menu**, scroll ▼ to **Registration** and press **Select**.

5 **Register HS** is highlighted. Press **Select**.

6 Bases are displayed. If necessary, scroll ▲ or ▼ to a new base you wish to register the Brick handset to and press **Select**.

7 If you are replacing a base that is already indicating **In Use,** when you press **Select** the display shows **Replace Base X?** Press **Yes.**

8 The display shows **Searching Base X**. If the system PIN is 0000 (default) the handset will automatically register, if the PIN has been changed, enter the system PIN and press **OK**.

NOTE

If registration is not successful the first time, please repeat the process again in case the base registration period ran out of time.

If there are already 11 handsets registered to the base, registration will fail. You must de-register a handset before you can register a new one.

12.2 To select a base

You can register the handset with up to 4 bases. Once registered, you can switch between bases, for example, bases at home and at work.

1 Press **Menu**, scroll ▼ to **Registration** and press **Select**.

2 Scroll ▼ to **Select Base** and press **Select**.

3 All the base numbers are displayed.
(**In use**) is shown beside the base number where the handset was previously registered to. Scroll ▲ or ▼ to the base you want and press **Select**.

4 The display shows **Searching Base** X.... When registration is complete, the handset returns to standby mode.

12.3 To de-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

1 Press **Menu**, scroll ▼ to **Registration** and press **Select**.
2 Scroll ▼ to **De-register** and press **Select**.
3 Enter the System PIN and press **OK**. (default setting = 0000)
4 Scroll ▲ or ▼ to the handset you want to de-register and press **Select**.
5 Press **Yes** to confirm or **No** to cancel.
6 Press [⏻] to return to standby mode.

13 ANSWERING MACHINE

The Brick answering machine records unanswered calls on the base when it is activated. It can store up to 59 messages within the maximum recording time of up to 30 minutes. Each message can be up to 3 minutes long. Your personalised outgoing messages (OGM) can be up to 3 minutes long.

You can operate your answering machine from:

- *the handset.*
- *remotely, from another phone, see page 49.*

NOTE

You will need to set the date and time (if you have not already) so that you will know when each message was received, see page 17.

13.1 Switch between answering machine on / off

When switched on the handset display shows [▭] in standby mode.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Answer On/Off** and press **Select**.
3 Scroll ▲ or ▼ to **Off** or **On** then press **Select**.
4 Press [⏻] to return to standby.

13.2 To change answer delay

Answer delay sets the number of times the Brick will ring before the answering machine picks up your call and starts playing the OGM.

You can change this setting to between 2-9 rings or **Time Saver**. The default setting is 5 rings.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Answer Settings** and press **Select**.
3 Scroll ▲ or ▼ to **Answer Delay** and press **Select**.
4 Scroll ▲ or ▼ to the setting you want and press **Select**.
5 Press [⏻] to return to standby.

NOTE

If **Time Saver** *is set, the answering machine will answer after 2 rings during remote access if you have new messages. If you do not have any new messages, it will answer after 5 rings. This means you can hang up after 3 rings knowing you have no new messages, saving you time and the cost of the call.*

13.3 To switch message alert tone on / off

When you have new messages, with the audible message alert switched on, you will hear an audible alert once at the handset and the answering machine base will beep every 10 seconds. The default setting is Off.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Answer Settings** and press **Select**.
3 Scroll ▲ or ▼ to **Message Alert** and press **Select**.
4 Scroll ▲ or ▼ to **Off** or **On** then press **Select**.
5 Press [⏻] to return to standby.

13.4 New messages alert

When you have new messages, the display shows **You have X new messages**.

If you press **Back**, the screen returns to standby mode and the icon is displayed.

13.5 Outgoing messages

The OGM is the message a caller first hears when the answering machine picks up their call. The Brick comes with 2 pre-recorded OGMs, or you can record your own.

13.6 To record a personalised OGM

You can record personalised OGMs up to 3 minutes long for your callers.

The Answer & Record mode allows your caller to leave a message after the announcement, while the Answer Only mode only allows your caller to hear the announcement. You will be prompted to select the mode before the recording.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Outgoing Msg.** and press **Select**.
3 **Record** is highlighted, press **Select**.
4 Scroll ▲ or ▼ to **Ans. & Rec.** or **Answer Only** then press **Select**.
5 The display shows **Please speak after the tone**.
6 After the tone, speak your message clearly into the handset then press **Save** to end recording.
7 Your OGM is played back. If you want to delete it, press **Delete** during playback. If you press **Save** or wait for the message to play back, it will be saved.
8 Press [⏻] to return to standby.

13.7 To play or delete your personalised OGM

Deleting a personalised OGM automatically reinstates the pre-recorded one.

You cannot delete a pre-recorded message.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Outgoing Msg.** and press **Select**.
3 Scroll ▼ to **Play** and press **Select**.
4 Scroll ▲ or ▼ to **Ans. & Rec.** or **Answer Only** then press **Select**.
5 Scroll ▼ to **Personal OGM** and press **Select**.
6 The message is played. Press **OK** to stop playback or press **Delete** to delete the message.
7 Press [⏻] to return to standby.

13.8 To set the answer mode OGM

You can select a pre-recorded or personalised OGM as the announcement to your callers.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Answer Settings** and press **Select**.
3 Scroll ▼ to **Answer Mode** and press **Select**.
4 Scroll ▲ or ▼ to **Ans. & Rec.** or **Answer Only** then press **Select**.
5 If there is a personalised OGM saved, scroll ▲ or ▼ to **Default OGM** or **Personal OGM** then press **Select** to confirm.
Or
If there is no personalised OGM saved, the pre-recorded OGM will be selected automatically.
6 Press [⏻] to return to standby.

13.9 To record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Record Memo** and press **Select**.
3 The display shows **Please speak after the tone**.
4 After your hear the tone, speak your memo then press **Save** to end recording.
5 Your memo is played back. If you want to delete it, press **Delete** during playback. If you press **Save** or wait for the message to play back, it will be saved.
6 Press [⏻] to return to standby.

NOTE

When a memo is played back, Memo is displayed on the handset.

13.10 Call screening

When the answering machine is on and takes a call, you can screen the message via the handset

1 When the handset rings, wait for the answering machine to take the call. When the caller begins leaving a message, the display shows **Recording**. Press **Screen** to hear the caller.
2 To interrupt and speak to the caller directly, press [ ].
3 Press [ ] to return to standby.

NOTE

While screening, you can adjust the volume by pressing ▲ or ▼.

13.11 Message playback

Each message is played back with day and time of the call announced. The caller's number is displayed (if stored in the phonebook the name will be displayed).

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 **Play** is highlighted. Press **Select** to play by message or scroll ▼ to **Play All** then press **Select** to play all messages.
3 During playback, press **Options**. The options **Pause**, **Repeat Message**, **Skip Forward**, **Skip Backward** and **Delete** are displayed.
4 Scroll ▲ or ▼ to highlight the option and press **Select** to confirm.
5 At the end of playback, press **Back** to return to the previous menu level.

NOTES

If you pause a message, press **Resum.** *to resume playback.*

Alternatively, you may use the following keys on your handset during playback:

1 To pause

2 To resume

3 To repeat message

4 To skip forward

5 To delete current message

6 To skip backwards

13.12 Delete all old messages

Answering machine messages that are not deleted are automatically saved.

New messages or existing messages that have not been played back cannot be deleted.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Del. Messages** and press **Select**.
3 Display shows **Delete All Old Messages ?**. Press **Yes** to confirm or **No** to cancel.
4 Press [⏻] to return to standby.

NOTES

If the memory is within 10 seconds of becoming full while a caller is leaving a message, they will hear, “Please complete your message within 10 seconds”. If they are still talking when the memory becomes full the caller hears, “Thank you for calling”, and the machine will hang up.

When the memory is full, the OGM will automatically be set to **Answer Only**. You must delete old messages before the Brick can record new messages.

13.13 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling the Brick from another phone.

The default setting is On.

1 Call your Brick. When you hear the OGM, press *.
2 Enter your 4 digit remote access PIN (default setting = 0000). You will hear a confirmation beep.

NOTE

You should change this code for additional security, see “To change the remote access PIN”.

3 Use the following keys to operate your answering machine:

DTMF code	Operations	
	with Voice Prompts	with Outgoing Messages
*	To enter remote access mode	To enter remote access mode
1	To hear main menu	No action
2	To play all messages	To play all messages
3	To play new messages	To play new messages
4	To skip back during messages	To skip back during messages
5	To delete during messages	To delete during messages
6	To skip forward during messages	To skip forward during messages
7	To set answer mode	No action
8	To record a new OGM	No action
9	To switch answer machine off	To switch answer machine off
0	To switch answer machine on	To switch answer machine on

NOTES

If you have any new messages they will be played after you have entered your remote access PIN code.

If you enter an incorrect PIN code you will hear "Incorrect security code or two beeps (error beeps). Please enter your security code". You can try entering the code again. If it is still incorrect you will hear the voice prompt or two beeps (error beeps) and the Brick will hang up.

13.14 To switch remote access on / off

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.

2 Scroll ▼ to **Answer Settings** and press **Select**.

3 Scroll ▲ or ▼ to **Remote Access** and press **Select**.

4 Scroll ▲ or ▼ to **Off** or **On** then press **Select**.

5 Press [⏻] to return to standby.

13.15 To change the remote access PIN

The default remote access PIN is 0000.

1 Press **Menu**, the display shows **Answer Machine**, press **Select**.
2 Scroll ▼ to **Answer Settings** and press **Select**.
3 Scroll ▲ or ▼ to **Remote Access** and press **Select**.
4 Scroll ▲ or ▼ to **Set Remote PIN** and press **Select**.
5 Enter the old 4-digit PIN and press **Save** (default setting = 0000).
6 Enter the new 4-digit PIN and press **Save**.
7 Re-enter the new PIN and press **Save**.
8 Press [⏻] to return to standby.

NOTES

This PIN is different from the System PIN used when resetting the unit or when registering / de-registering handset.

It is advisable to make a note of your new PIN code and keep it somewhere safe.

14 HELP

The [▭] icon is not scrolling during charge

. Bad battery contact – move the handset slightly.
. Dirty contact – Clean the battery contact with a cloth moistened with alcohol.
. Battery is full – no need to charge.

No dialling tone

. No power – check the connections. Reset the phone: unplug and plug back in the mains.
. Batteries are empty – charge the batteries for at least 24 hours.
. You are too far from the base – move closer to the base.
. Wrong line cable – use the line cable provided.
. Line adaptor (when needed) is not connected to the line cord – connect the line adaptor (when needed) to the line cord.

Poor audio quality

. The base is too close to electrical appliances, reinforced concrete walls or metal doorframes – move the base at least one metre away from any electrical appliances.

The signal icon is blinking

. Handset is not registered to the base – register the handset to the base.
. You are too far from the base – move closer to the base.

No ring tone

. The ring tone is deactivated.
. Increase the volume.

Caller ID service does not work

. Check your subscription with your network operator.

A phonebook entry cannot be stored

. The phonebook is full. Delete an entry to free memory.

No display

. Try recharging or replacing the batteries.
. Try disconnecting and connecting the base power supply.
. If LED is not lit up, then try disconnecting and connecting the base power supply.

Unable to register another handset

. Maximum number of 11 handsets has been reached.
. The display shows **Searching...**. You must unregister a handset in order to register a new one.

Noise interference on your radio or television

. Your base or charger may be too close. Move it as far away as possible.
. Answering machine does not record messages

Switch the answering machine on.

. The memory may be full. If so, you will need to delete some messages.
. Answer mode may have been set to Answer Only. Change
. the mode to Ans. & Rec..

Cannot access messages remotely

. Remote access may be switched off.
. Check that you are using the correct PIN code.

Cannot record outgoing message

. The memory may be full. If so, you will need to delete some messages.

Answering machine stops recording

. The memory may be full. If so, you will need to delete some messages.
. The maximum message length is 3 minutes.

14.1 Warranty and Service

The Brick Phone has a warranty of 12 months from the date of purchase as shown on your sales receipt. The warranty does not cover any faults or defects caused by accidents, misuse, fair wear and tear, negligence, faults on the telephone line, lightning, tampering of the equipment or any attempt to adjust or repair other than through approved agents.

Please keep your original dated sales receipt as proof of warranty. You should also keep the contents of the original packaging.

In the unlikely event that you need to return your Brick Phone to our Repair Centre while it is under warranty, a handling charge may apply.

14.1.1 Servicing Under Warranty

1 Disconnect the base unit from the telephone line and the main power supply.

2 Pack all components of your Brick Phone using the original packaging.
Remember to include the power adapter.

3 Return the unit to the shop where you made your purchase. Bring along your original dated sales receipt.

14.1.2 Servicing After Warranty Has Expired

If the unit is no longer covered under warranty:

1 Disconnect the base unit from the telephone line and the main power supply.

2 Pack all components of your Brick Phone using the original packaging.
Remember to include the power adapter.

3 Contact our website **www.meetthebrick.com** and request for a quotation on potential repair charges. Our customer service staff will provide you with details on where to send your Brick Phone for repair.

4 Make sure you include the followings:

- Your name and residential address
- A cheque or postal order for the repair charge

5 Bring all the necessary items to the location provided by our customer service staff.

15 TECHNICAL DETAIL

Standard	Digital Enhanced Cordless Telecommunication (DECT)
Frequency range	1881.7920 MHz (Ch 9) to 1897.3440 MHz (Ch 0)
Channel Width	1.728MHz
Multiple Access	TDMA/FDMA
Operating range	Up to 1000m outdoors; Up to 50m indoors
Operating time	Standby: 200 hours, Talking: 10 hours
Temperature range	Operating 10°C to +40 °C, Storage -20°C to +60 °C
Electrical power	**Base unit:** MEIC: MN-A102-U130 Input: 100-240V 50/60Hz 200mA, Output: 6V DC 400mA **Charger unit:** MEIC: MN-A102-U130 Input: 100-240V 50/60Hz 200mA, Output: 6V DC 400mA **Battery Information** Sanik - Rechargeable 2 x 550mAh NIMH Battery

Risk of explosion if battery is replaced by an incorrect type

Dispose of used batteries according to the instructions.

Port specification

The port (connected to the mains power supply) is a SELV port with respect to EN 60950

The port (connected to the telephone line) is a TNV port with respect to EN 60950

CLEANING AND CARE

Do not clean any part of your phone system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with a damp cloth.

Keep your phone system away from **hot, humid conditions or strong sunlight, and don't let it get wet.**

Every effort has been made to ensure high standards of reliability for your phone system. However, if something does go wrong, **please do not try to repair it yourself, but consult your supplier or the Helpline.**

Binatone Electronics International Limited
Floor 23A, 9 Des Voeux Road West, Hong Kong
Tel: (852) 2802 7388 Fax: (852) 2802 8138

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Electronics International Limited
Floor 23A, 9 Des Voeux Road West, Hong Kong
Tel: (852) 2802 7388 Fax: (852) 2802 8138

Declare under our sole responsibility that the following product

Type of equipment:	Digital cordless telephone with Answering Machine
Model Name:	Brick4Home /Brick4Home Plus series
Country of Origin:	China
Brand:	Binatone

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to ***Radio Spectrum Matters***, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to ***electromagnetic compatibility (EMC)*** and the European Community Directive 2006/95/EC relating to ***Electrical Safety*** , Directive 2011/65/EC on the ***restriction of use of hazardous substances*** (RoHS) and 2009/125/EC relating to ecodesign requirement for Energy-Related Products (ErP).

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard / regulation:

Radio Spectrum:	EN 301406: V2.1.1 (2009-07);
EMC:	EN 301489-6:V1.3.1 (2008-08);
	EN 301489-1:V1.9.2 (2011-09);
	EN55022:2010
	EN55024:2010
	EN61000-3-2:2006 +A1 +A2:2009
	EN61000-3-3:2008
Heath & Electrical Safety:	EN 60950-1:2006 + A11+A1+A12:2011
	EN50360:2001 +A1:2012 & EN50385 : 2002
ErP	Implementing regulation EC1275/2008

Manufacturer / Importer

(Signature of authorized person) 22 Oct 2013
Date

Patrick Cheung
Senior Product Manager
Place: Hong Kong